


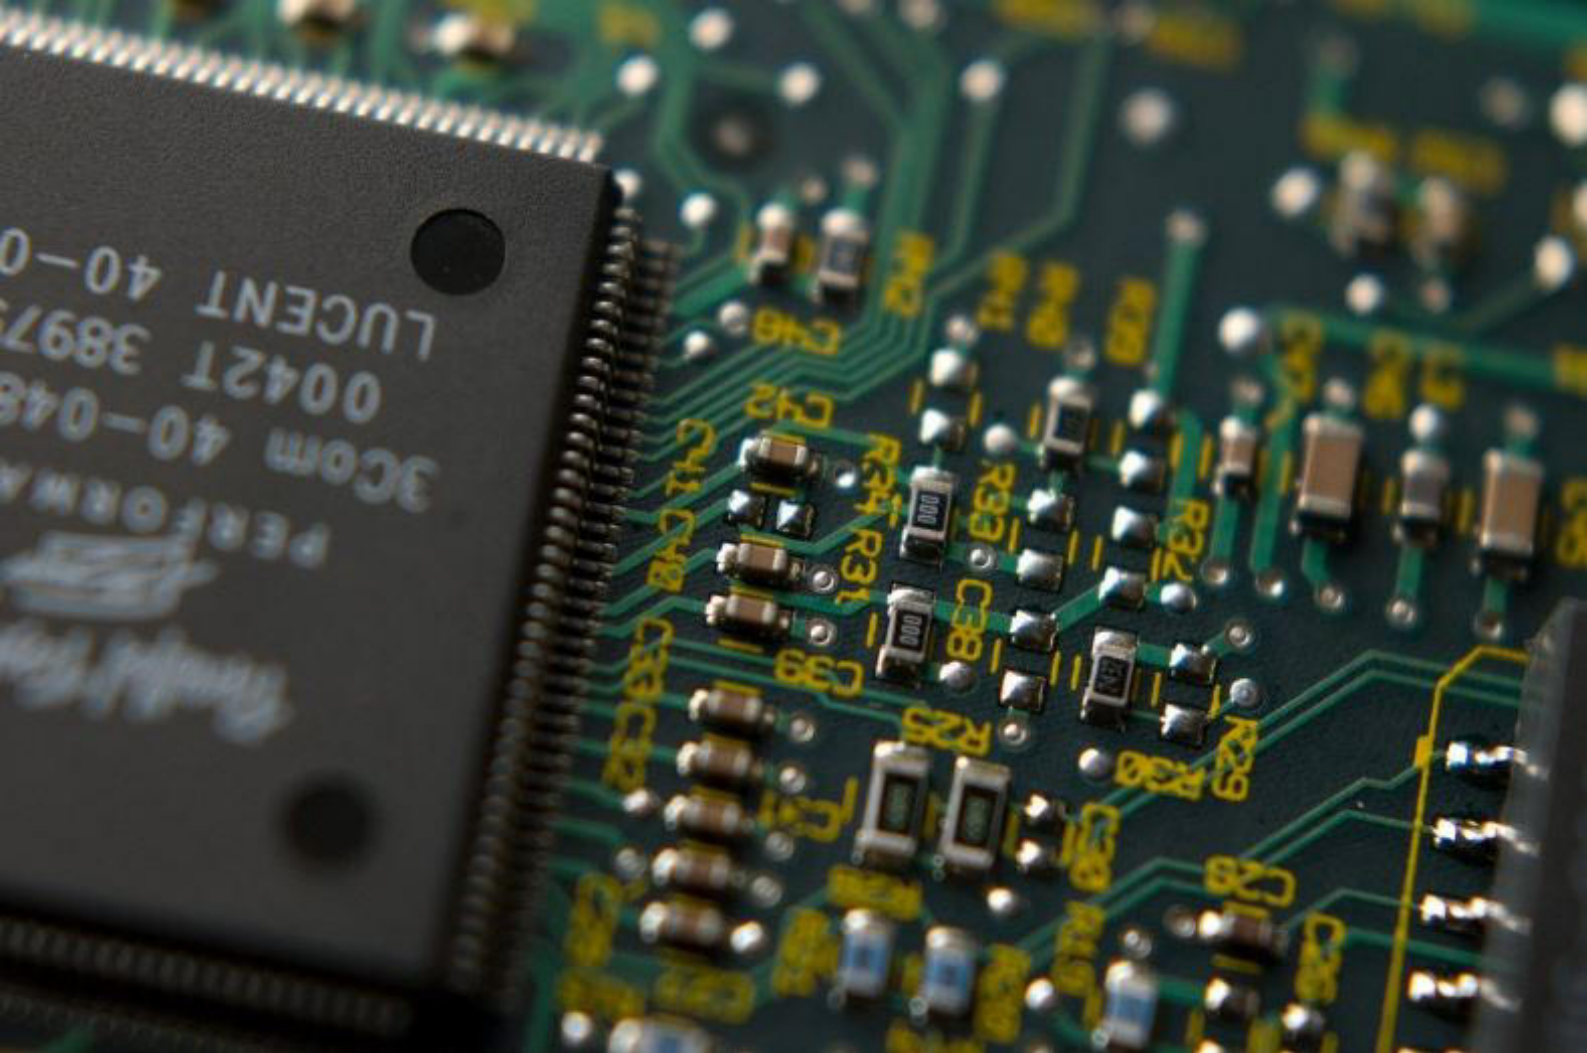

Application Note AN-PAN-1028

Monitoring tetramethylammonium hydroxide (TMAH) in developer online

概要

Tetramethylammonium hydroxide (TMAH) is a quaternary ammonium salt mostly used in the production of integrated circuits (IC), printed circuit boards (PCB), and flat panel displays (LCD), and photolithography is the most common process used to manufacture these devices.

In this process, a photoresist developer is used to transfer a pattern on a substrate. The chemicals used in the semiconductor industry must be exceptionally pure because even traces of contaminants have a negative effect on

electrical properties.

The development stage is a critical step in photolithography, and in order to be successful, this process must be optimized in order to increase production efficiency. This Process Application Note presents a method to monitor the TMAH concentration in the developer solution via online process titration. This is a multiparameter analytical technique that can accurately monitor TMAH using a combined pH electrode.

INTRODUCTION

For the production of semiconductors it is of the utmost importance to use extremely high purity chemicals. The presence of impurities (even trace concentrations) can significantly affect the material's electrical properties. The same applies for the concentrations of the chemicals used during the production process. In back end of line (BEOL) processing, the photolithography process uses light to print thin film patterns from a photomask (an opaque plate with openings for light) on a micrometer (or smaller) scale with a light-sensitive photoresist chemical applied thinly on the silicon wafer.

After a certain exposure time, the printed circuit is developed and the photoresist can be stripped away in preparation for the next steps (**Figure 1**). Tetramethylammonium hydroxide (TMAH, $\text{N}(\text{CH}_3)_4\text{OH}$) is an alkaline ingredient in photoresist developer kept at a concentration between 2.38– 2.62% in many applications (**Figure 2**). TMAH is highly effective in stripping off the acidic photoresist as it becomes soluble in the developer. TMAH-based photoresist developers have replaced many traditional developers (such as KOH and NaOH) since these processes increasingly need to be metal-ion-free.

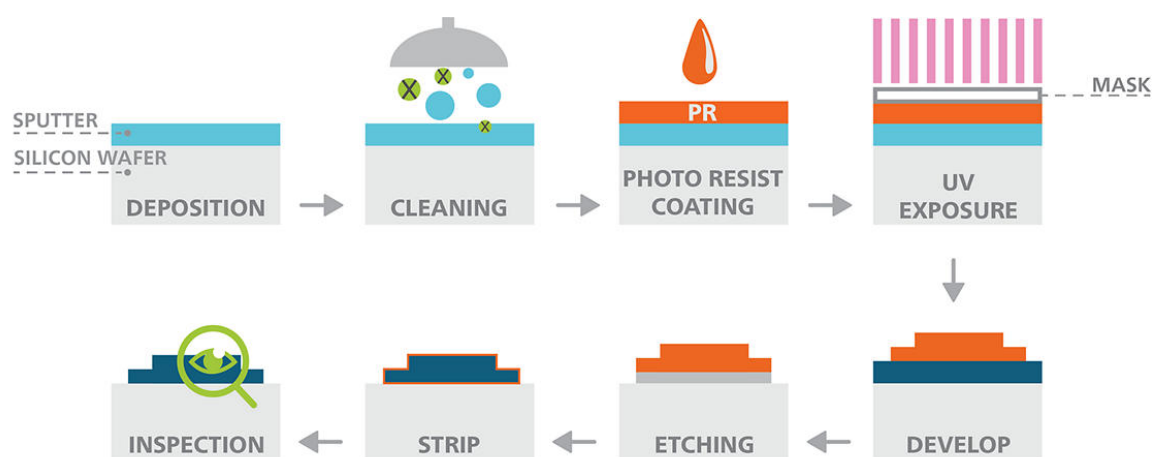


Figure 1. Diagram of the photolithography process in integrated circuit production.

A concentrated solution of TMAH (25%) is diluted in the Chemical Central Supply System (CCSS) and the appropriate percentage is then added to the production line. Used TMAH developer containing the photoresist residue is

returned and more TMAH is added to adjust the concentration. Once the amount of residue has reached a certain level, the waste is removed. A purification unit can be used to minimize TMAH in the waste stream.

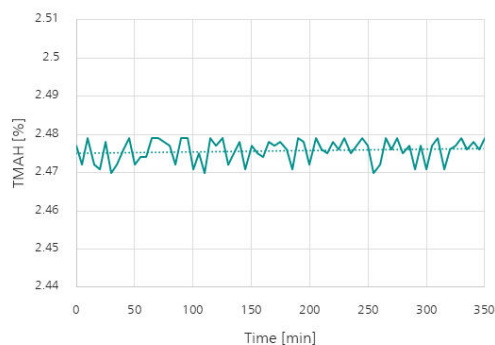


Figure 2. Example trend chart for TMAH (%) coming from the CCSS.

INTRODUCTION

Development is a critical step, and the **2035 Process Analyzer - Potentiometric** from Metrohm Process Analytics (**Figure 3**) can monitor and even stabilize the TMAH concentration in the developer solution, ensuring proper photoresist stripping while minimizing the exposure of

personnel to highly toxic TMAH, thus providing a complete turnkey solution. Continuous online analysis is also critical for the batch release of a chemical blending/dilution system for diluted TMAH.

APPLICATION

The **2035 Process Analyzer** configured for potentiometric titration performs the accurate analysis of TMAH online using a combined pH electrode. Precise dosing of TMAH in the developer solution by the analyzer is also a possibility to ensure a stable concentration for every batch.

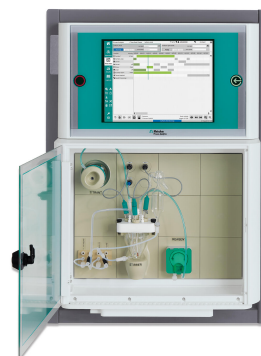


Figure 3. 2035 Process Analyzer - Potentiometric for accurate determination of TMAH in developer.

TYPICAL RANGES

Diluted tetramethylammonium hydroxide

(TMAH): 2.38–2.62%, as concentrate: 25%

FURTHER READING

Related application notes

[AN-PAN-1054 Online monitoring of hydrogen peroxide during the CMP process](#)

[AN-PAN-1055 Monitoring quality parameters in standard cleaning baths](#)

Other related documents

[Semiconductor industry – Reliable online, inline and atline solutions for your process requirements](#)

REMARKS

Other applications are available for the semiconductor industry including:

- copper, sulfuric acid, and chloride in acid copper baths
- hydrogen peroxide in CMP slurry
- acidity in mixed acid etchants
- hydrofluoric acid, ammonium hydroxide, and hydrochloric acid in standard clean baths

BENEFITS FOR TITRATION IN PROCESS

- Enhanced printed circuit yields with qualified TMAH compositions
- Increased product throughput with less wafer defects
- Greater mixing integrity and purity in the CCSS
- Enhanced reproducibility, production rates, and profitability (less waste)



CONTACT

瑞士万通中国
北京市海淀区上地东路1号
院1号楼7层702
100085 北京

marketing@metrohm.com.cn

CONFIGURATION



2035 Process Analyzer Potentiometric

适用于电位滴定和离子选择性测量的 2035 Process Analyzer 过程分析仪,可使用专用电极和滴定剂进行分析。此外,该版本的 2035 Process Analyzer 过程分析仪还适用于使用万通高性能电极进行离子选择性分析。这一准确的标准溶液技术是处理复杂样品基质的可靠方法。

此电位分析款型的分析仪可提供当前市场上所有测量技术的准确结果。滴定法作为常用的分析方法之一,具有远超过 1000 种应用可供使用,能分析数百种成份,从酸/碱元素直到电解池中金属浓度,可用于几乎任何行业。

滴定法是目前使用广泛的绝对化学方法之一。该技术简单易行,无需校准。

可用于此配置的部分滴定选项:

- 电位分析滴定
- 使用光纤技术的比色滴定
- 基于卡尔·费休滴定法测定水份