



Application Note AN-PAN-1064

利用拉曼光谱在线监测电镀液中的络合剂

The main purposes of galvanic process baths include the surface refinement of workpieces and the setting of physical properties. To this end, bath additives (e.g., organic compounds or complexing agents) are regularly added in different amounts, depending on the processing load. Since the bath composition changes continuously due to the introduction of the workpieces, close monitoring of the

concentration of the bath additives is necessary to ensure that the end product quality is at the highest level.

This Process Application Note presents a method to accurately analyze **complexing agents** inline in galvanic baths with a **2060 Raman Analyzer** from Metrohm Process Analytics. This enables real-time bath control and thus an increase in production efficiency and product quality.

INTRODUCTION

The electroplating process consists of using electricity to coat a material (e.g., copper (Cu)) with a thin layer of another material (e.g., nickel (Ni), zinc (Zn)), usually for protective reasons.

Zinc and its alloys (e.g., Zn/Ni) are some of the main materials used for protection against steel corrosion. However, Zn-Ni alloys are primarily used because they are five to six times stronger than pure Zn to counter corrosion [1].

Organic additives or complexing agents are added to the electrolyte solution in the bath to improve the deposition process, and hence the corrosion resistance [2].

During the electroplating process, complexing agents are used to form complexes with metal ions in the electrolyte-plating solution. These complexes help to keep the metal ions in solution, preventing their premature precipitation or unwanted side reactions. Amines, for instance, can act as complexing agents in alkaline Zn/Ni baths. They form stable complexes with metal ions (e.g., Zn^{2+} and Ni^{2+}), preventing them from reacting with other ions. This helps to control the deposition potential, improve conductivity, and suppress dendrite formation [3].

Traditionally, monitoring the concentration of

complexing agents in electroplating baths is done manually. This is a cumbersome process, involving the extraction of bath samples which must be transported to a laboratory for analysis.

These actions not only fail to capture the real-time composition of the baths but also entail safety risks. The delay between sample collection and analysis can lead to prejudiced results, as changes in the electroplating process may occur before the analysis is complete.

The utilization of inline Raman spectroscopy addresses these challenges by enabling the continuous analysis of inorganic and organic components, including complexing agents, in real-time. Unlike traditional wet chemical methods, spectroscopy requires no sample preparation and can be seamlessly integrated into the electroplating process. This allows minute-by-minute insights into the bath's condition and facilitates more precise control over the deposition potential, conductivity, and dendrite formation. Not only does this enhance efficiency, but it also contributes to the safety and reliability of electroplating operations.

An inline process analyzer can be connected to the galvanic bath via fiber optics and a flow cell (**Figure 1**). To take advantage of the multiplexing



Figure 1. Illustration of a typical wet bench setup showing three different ways (A–C) to connect to the galvanic process bath for continuous inline monitoring of its composition with process Raman spectroscopy.



Figure 2. The 2060 Raman Analyzer is ideal for quantitative inline analysis of complexing agents in galvanic baths.

APPLICATION

For automated analysis during routine operation, the application is developed in advance by Metrohm Process Analytics. For this purpose, spectra are recorded with the 2060 Raman Analyzer (Figure 2). The spectra are correlated with data from a reference analysis method and a robust calibration model is

created. The calibration model is used automatically in the process. The user receives the results of the concentration measurement both in tabular form and as a process trend chart (Figure 3). The values can be transferred to a process control system via a process communication interface.

Table 1. Process parameters measured by the 2060 Raman Analyzer in electroplating baths.

Concentration [g/L]	
Organic additives (electrolytes)	0100 ± 0.5

RESULTS

The trend chart in Figure 3 shows the results of inline Raman analysis of organic additives in a galvanic plating bath compared to the reference analysis which is performed manually. Inline analysis captures the process changes much better, allowing manufacturers to adjust bath composition quicker, saving costs.

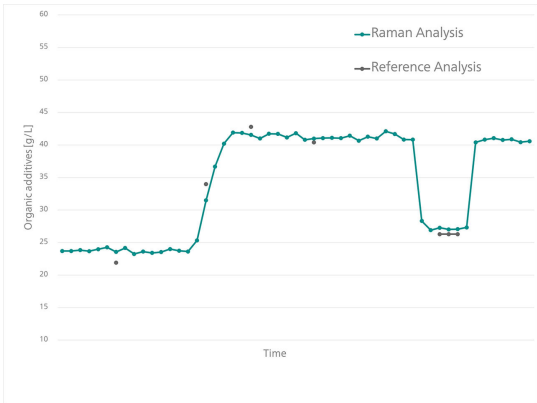


Figure 3. Trend chart of the inline Raman measurements made by the 2060 Raman Analyzer for the determination of the organic additives.

REMARKS

A reference method must still be in use. An appropriate range of samples covering the process variability should be analyzed by both methods (i.e., primary reference and Raman) to build an accurate Raman model. Correlations are made to process specifications.

The correct Raman probe must be placed in-situ in a manner that provides sufficient sample contact with the probe tip window. Correct probe design and proper placement in process equipment is highly important.

CONCLUSION

Raman spectroscopy is an easy-to-use analytical technique that identifies liquids and solids within seconds. The 2060 Raman Analyzer from Metrohm Process Analytics is a high-performance Raman system designed for monitoring different processes like

electroplating.

Together with Metrohm's Vision and IMPACT software, the 2060 Raman Analyzer can be used to acquire real-time results, increase productivity, and lower production costs.

RELATED APPLICATION NOTES

- [AN-PAN-1012 Online analysis of nickel ion and hypophosphite content in electroless nickel plating baths](#)
- [AN-PAN-1018 Determination of acids, bases and aluminum: galvanic industry – metal surface treatment](#)
- [AN-T-223 Analysis of electroplating baths](#)

BENEFITS FOR RAMAN IN PROCESS

- «Real-time» feedback to the process to guarantee a high level of control for coatings.
- Early detection of bath failures.
- Multiple parameters from a single measurement.
- Unique Raman spectra that serve as specific fingerprints for material identification.



REFERENCES

1. Leiden, A.; Kölle, S.; Thiede, S.; et al. Model-Based Analysis, Control and Dosing of Electroplating Electrolytes. *Int. J. Adv. Manuf. Technol.* **2020**, *111* (5), 1751–1766. <https://doi.org/10.1007/s00170-020-06190-0>.
2. Gezerman, A. O. Effects of Novel Additives for Zinc-Nickel Alloy Plating. *Eur. J. Chem.* **2019**, *10*, 118–124. <https://doi.org/10.5155/eurjchem.10.2.118-124.1834>.
3. Son, B.-K.; Choi, J.-W.; Jeon, S.-B.; et al. Concentration Influence of Complexing Agent on Electrodeposited Zn-Ni Alloy. *Appl. Sci.* **2023**, *13* (13), 7887. <https://doi.org/10.3390/app13137887>.

CONTACT

瑞士万通中国
北京市海淀区上地东路1号
院1号楼7层702
100085 北京

marketing@metrohm.com.cn

CONFIGURATION



2060 Raman

2060 Raman Analyzer 是一款非破坏性的在线过程分析仪,采用 Raman 光谱技术,可提供准确和实时的过程监控。凭借其自我监控功能、高通过量光谱仪和实用的激光稳定性,它可以立即了解化学成分,并能及时调整以实现非常好的过程控制,确保一致的产品质量,并提高整体工作效率。

可在分析仪上连接多达 5 个探头和/或流通池。所有 5 个通道均可在嵌入式专有软件中相互独立地配置。