



Application Note AN-PAN-1001

Online analysis of hydrogen sulfide and ammonia in sour water stripper


Sour water refers to the wastewater stream generated at many locations within a refinery, but specifically from crude distillation (CDU), fluid catalytic cracking (FCC), catalytic reforming, coker, and acid gas removal units [1]. Thus, this stream contains contaminants such as hydrogen cyanide (HCN) and carbon dioxide (CO₂), but most importantly hydrogen sulfide (H₂S) and ammonia (NH₃). These contaminants can be highly corrosive and detrimental to company

assets; therefore, they need to be removed at a sour water stripping plant (SWS) before the stripped sour water (SSW) or effluent can be reused in the refinery. This Process Application Note details the simultaneous online analysis of H₂S and NH₃ in sour water which was previously treated in the sour water stripper (SWS). The method includes automatic cleaning and calibration. Fast and accurate results are continuously supplied for process control.

«Sour water» is condensed wastewater produced during many downstream refining processes containing hydrogen sulfide, ammonia, and other contaminants. It is often acidic in nature and can cause corrosion problems within the refinery's pipework so must be treated before it can be reused or disposed to the waste treatment plant.

The sour water is treated in a sour water stripper

(SWS) that uses a steam stripping process to remove sulfides and ammonia as gases. The sour water is received directly from the refinery to the flash drum as part of the «degasification» step (**Figure 1**). In there, the remaining light hydrocarbons are removed or «flushed off» from the water. The sour water is then stabilized in a tank before it is heated and sent to the stripper column.



Reaction 1. Chemical decomposition reaction in a stripper column

At optimum pH, the sour water mixes with steam and the ammonia and hydrogen sulfide gases vent to the top of the stripper column to the Sulfur Recovery Unit (SRU). This separation happens due to the difference

within the components' boiling points. The stripped water is either used to produce steam in the reboiler or pumped within control limits to the wastewater treatment plant for further processing.

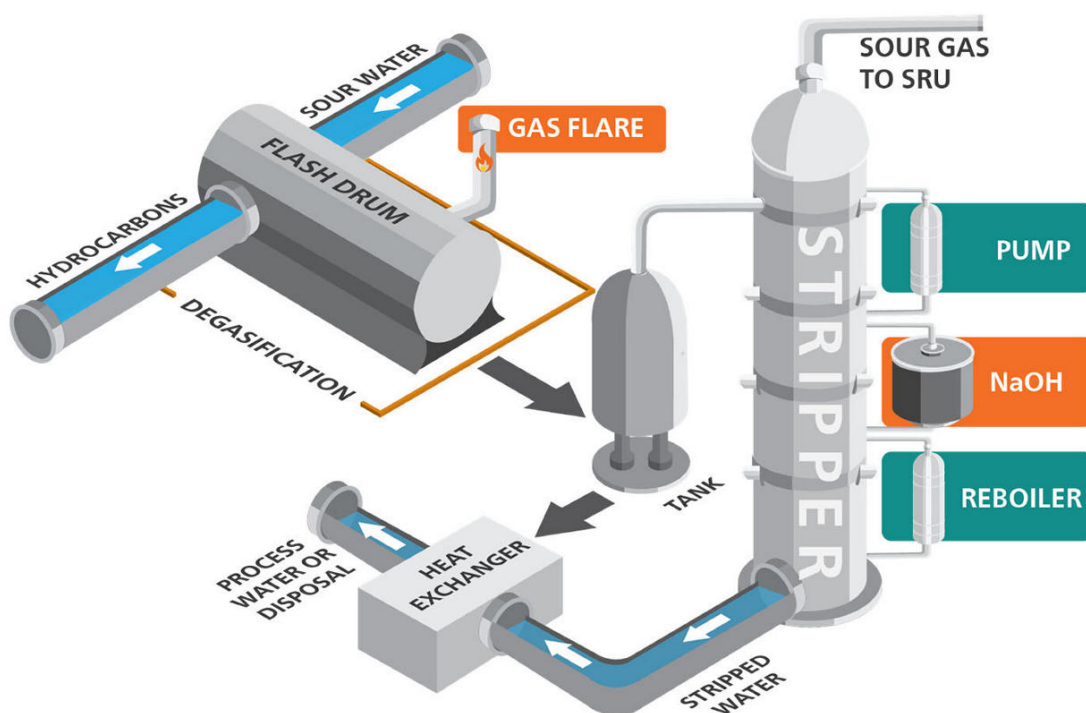


Figure 1. Sour water stripping process scheme (SRU: Sulfur Recovery Unit).

Monitoring H₂S and NH₃ content in stripped sour water is necessary to guarantee stripping efficiency and verify if the wastewater can be recycled or released to the environment.

The poisonous conditions of this process make manual sampling for analysis a challenge since human intervention is needed to adapt current operation conditions to the process. Thus, online and inline analysis solutions are preferred.

In order to ensure an adequate extraction of H₂S from the stream, it should be constantly monitored online. In the same way, optimization of the ammonia

stripping efficiency should be extensively monitored to avoid the formation of ammonium (NH₄⁺), which cannot be stripped as a gas. Therefore, caustic (NaOH) is injected at the bottom of the tower to keep the pH above 8, facilitating NH₃ gas formation. Online analysis of ammonia and sulfides will increase the «stripper efficiency» of the SWS, leading to significant steam reduction and increased energy savings. Effectively stripping and monitoring H₂S and NH₃ is also an essential operation in the overall pollution reduction program of refineries.

APPLICATION

The 2060 Process Analyzer can analyze H₂S and NH₃ simultaneously with automatic cleaning and calibration steps using absolute wet chemical techniques. Sulfide (S²⁻) is determined by a precipitation titration with silver nitrate (AgNO₃). Ammonia is determined by Dynamic Standard Addition (DSA). Fast and accurate results are continuously transmitted to the programmable logic controller (PLC) for process control.



Figure 2. 2060 Process Analyzer for online analysis of ammonia and hydrogen sulfide in the sour water stripping process.

Table 1. Parameters to monitor in SWS effluent.

Analyte	Concentration (mg/L)
NH ₃	0–200
H ₂ S	0–50

REMARKS

Other contaminants that increase the sour water corrosiveness like phenol and cyanide can also be

analyzed with Metrohm Process Analyzers.

FURTHER READING

Brochure: Petroleum and Petrochemicals Industry
Mercaptans and hydrogen sulfide in raw oil in
accordance with ASTM D3227 and UOP163

Determination of salt in crude oil
Online thermometric titration of acid number (AN) in
oils (ASTM D8045)

BENEFITS FOR TITRATION IN PROCESS

- **Protection of company assets** with built-in alarms at specified warning limits to prevent corrosion
- **Safer working environment** for employees (corrosive environments)
- **Guarantee compliance** with environmental standards
- **Lower energy cost** by avoiding over stripping of ammonia and sulfide



REFERENCE

1. Sour Water Stripping (SWS) - Oil & Gas | Pall Corporation <https://www.pall.com/en/oil->

[gas/refining/sour-water-stripping.html](https://www.pall.com/en/oil-gas/refining/sour-water-stripping.html)
(accessed 2021-10-05).

CONTACT

Metrohm Inula
Shuttleworthstraße 25
1210 Wien

office@metrohm.at

CONFIGURATION



2060 Process Analyzer

Der 2060 Process Analyzer ist ein Online-Analysengerät für die Nass-Chemie, das sich für zahlreiche Anwendungen eignet. Dieser Prozessanalysator bietet ein neues Baukastensystem, das eine zentrale Plattform hat, den sogenannten „Basisschrank“.

Der Basisschrank besteht aus zwei Teilen. Der obere Teil enthält einen Touchscreen sowie einen Industrie-PC. Im unteren Teil befindet sich der flexible Nassteil, in dem die Hardware für die eigentliche Analyse untergebracht ist. Wenn die Kapazität des Nassteils aus der Grundausstattung nicht ausreicht, um eine analytische Herausforderung zu bewältigen, kann der Basisschrank auf bis zu vier weitere Nassteilschränke erweitert werden. So lässt sich sicherstellen, dass selbst für die anspruchsvollsten Anwendungen genügend Platz vorhanden ist. Die zusätzlichen Schränke lassen sich so konfigurieren, dass jeder Nassteilschrank zwecks Erhöhung der Betriebszeit des Analysengeräts mit einem Reagenzienschrank, der über eine integrierte (kontaktlose) Füllstandserfassung verfügt, kombiniert werden kann.

Der 2060 Process Analyzer bietet verschiedene nasschemische Methoden: Titration, Karl-Fischer-Titration, Photometrie, Direktmessung und Standardadditionsverfahren.

Zur Erfüllung aller Projektanforderungen (oder all Ihrer Bedürfnisse) sind auch Probenaufbereitungssysteme erhältlich, die eine stabile Analyselösung garantieren. Wir können jedes Probenaufbereitungssystem liefern, unter anderem zum Kühlen oder Heizen, Druckmindern oder Entgasen, Filtrieren und für vieles mehr.